




# Nikon Coolpix S220 Accessing the Motherboard

This guide will teach the reader how to access the motherboard.

Written By: Shauna

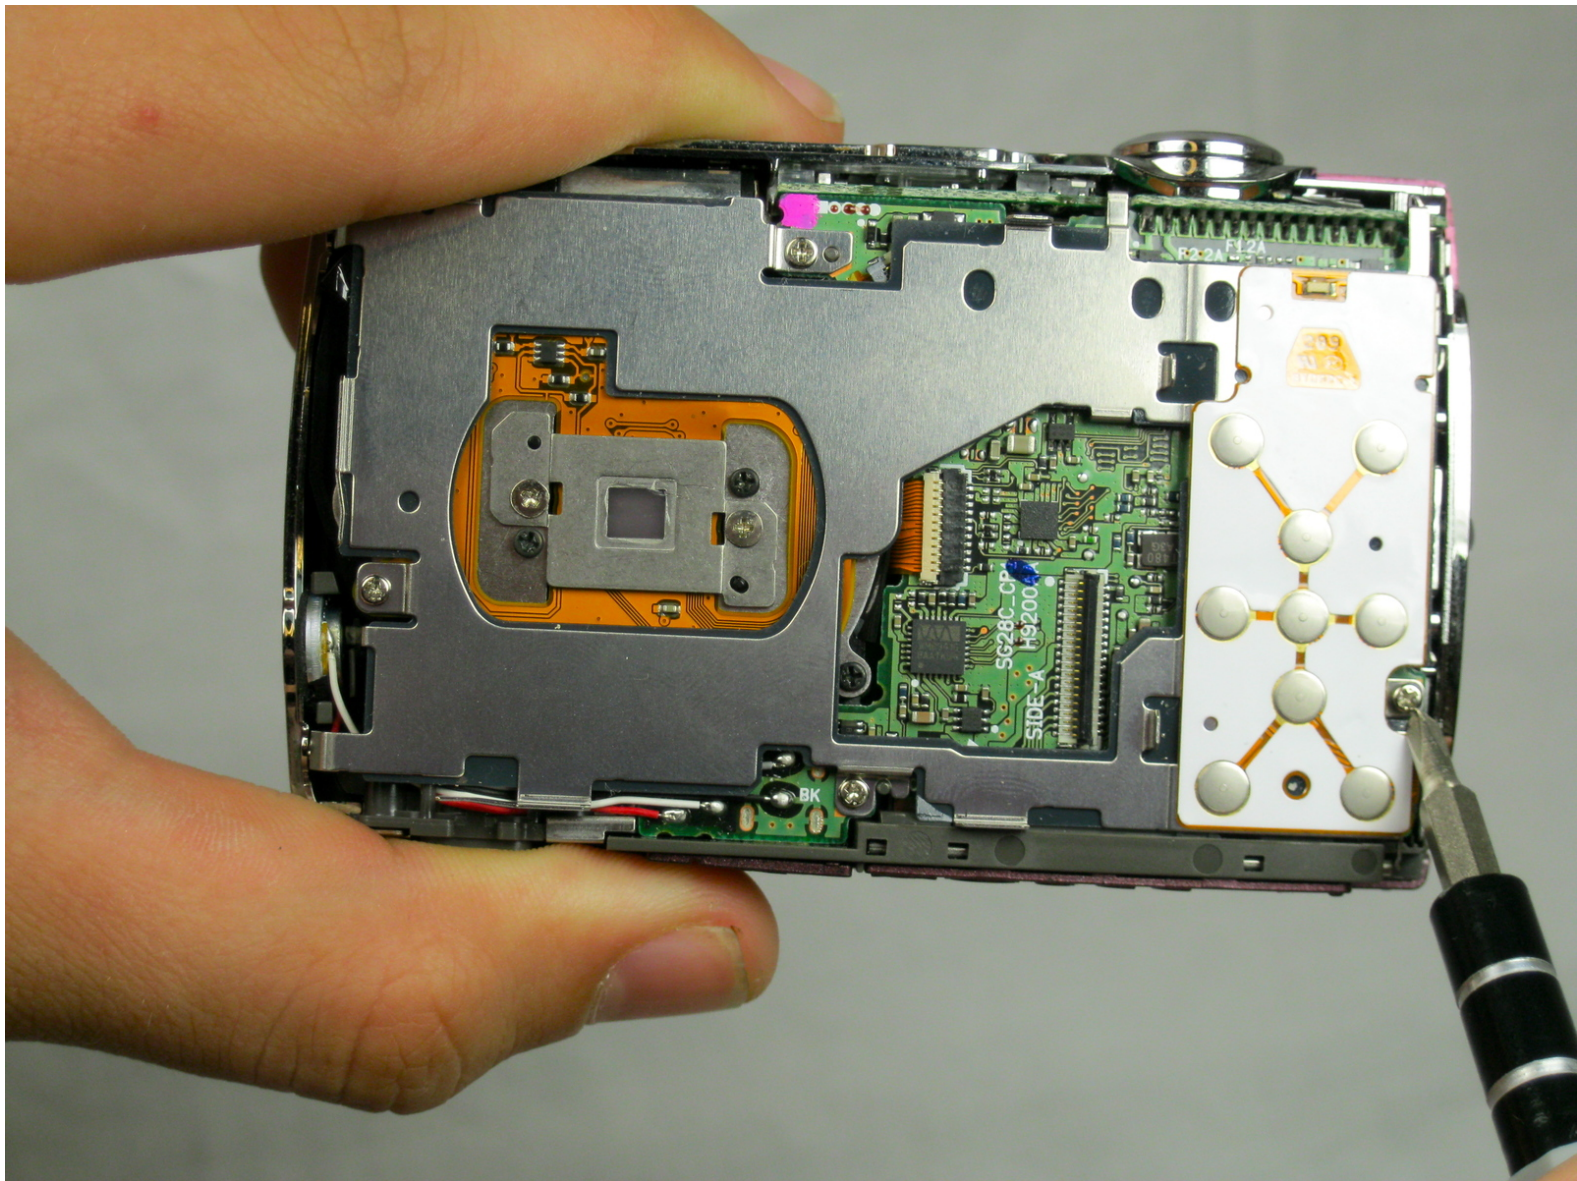

## INTRODUCTION

This guide will show how to access the motherboard which will give you the ability to remove the lens and flash.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-



## Step 1 — Outer Cover



- Remove the two 2.8 mm screws on the left side of the camera.

## Step 2




- Remove the four 2.8 mm screws on the right side of the camera.

## Step 3



- Remove the three 4.1 mm screws on the bottom of the camera.

## Step 4

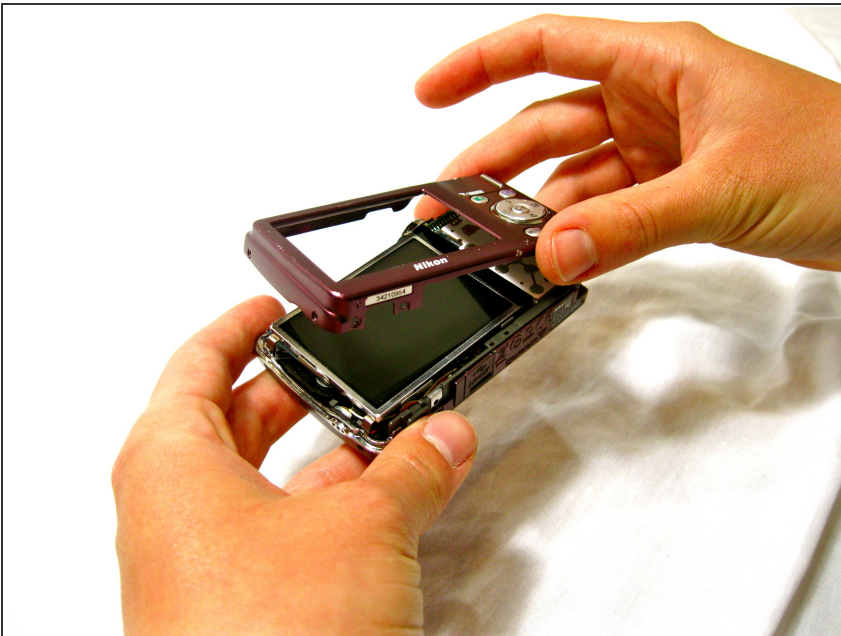

- Gently lift the rear cover from the camera.




## Step 5 — LCD



- Gently lift the screen out of its place.
- ⓘ You will need to hold the screen slightly above the camera because it will still be attached to the camera by an orange ribbon cable.

## Step 6

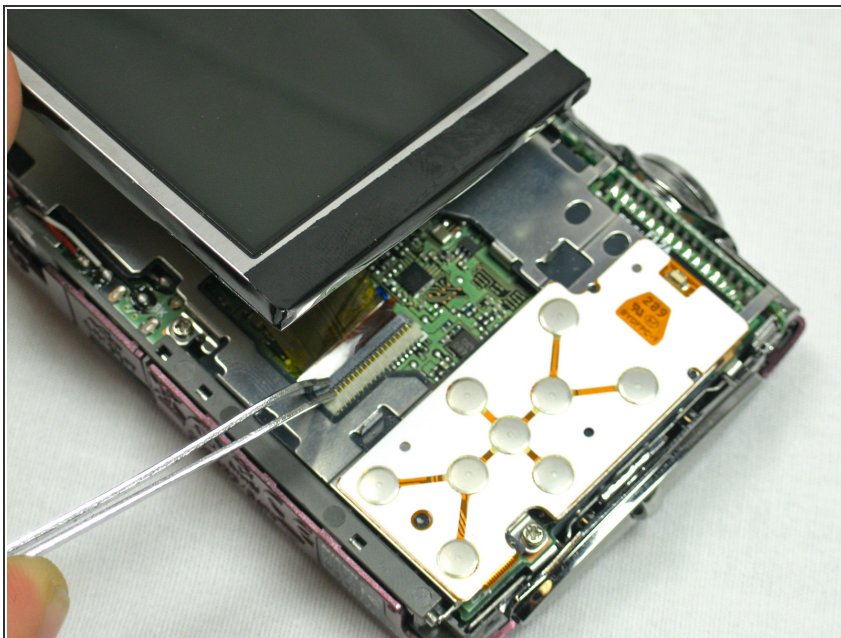


- Use the tweezers to lift the ZIF connector which is holding the ribbon cables that connect the LCD screen to the motherboard.

## Step 7



- Slowly pull the screen from the camera.


## Step 8 — Motherboard

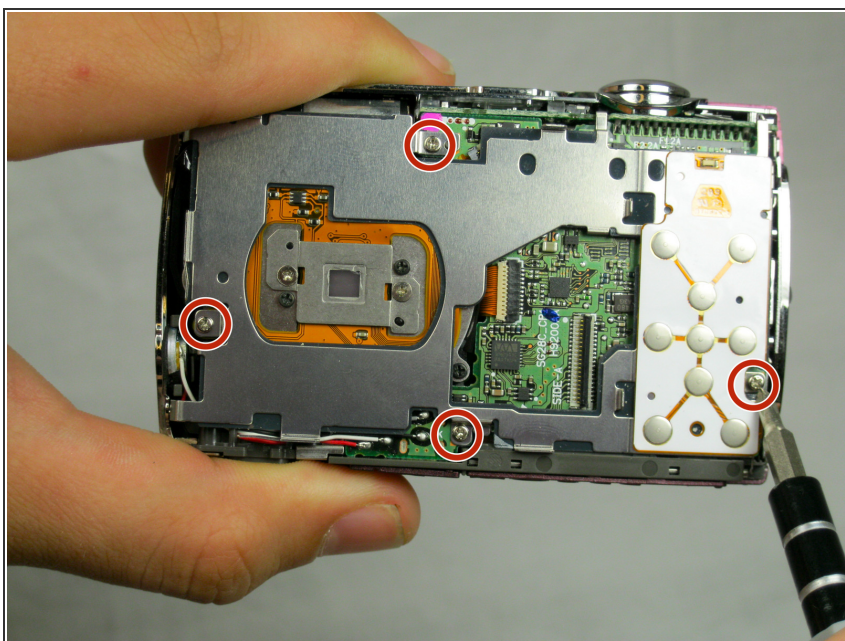

- Remove the four 3.8 mm screws located near the bottom right and top left of the LCD base plate.





## Step 9

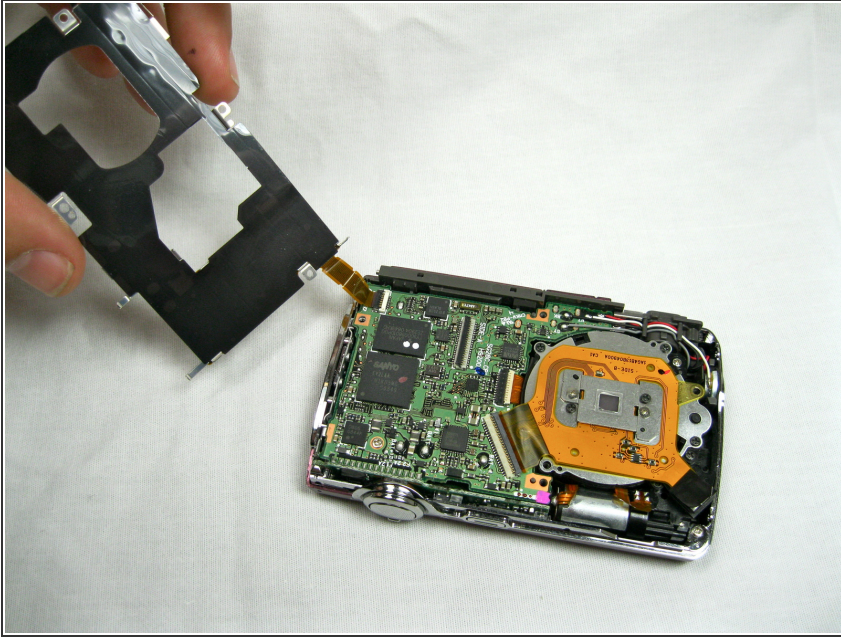

- Lift up silver LCD base plate

## Step 10

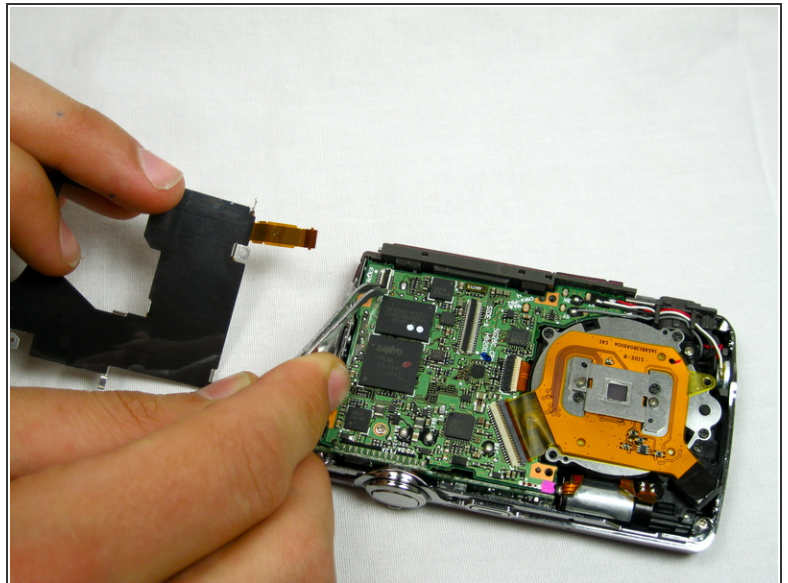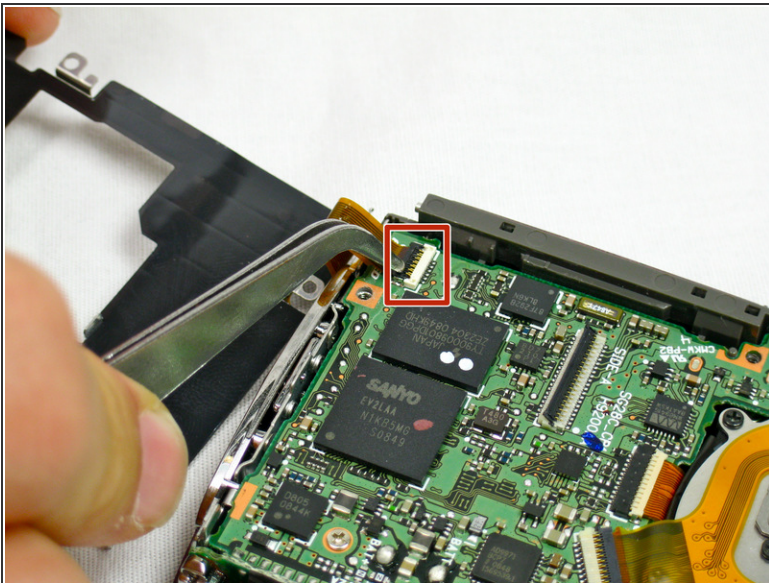

- Using tweezers, lift up the retaining flap on the ZIF connector securing the button panel ribbon cable.
- Slide the button panel ribbon cable out of its socket on the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:20:21 PM.